

## Operating Instructions (ST-2)

### Features

- ◆ In and out dual-way temperature measuring
- ◆ Function of clock display

### Parameters

- ◆ Temperature range:  $-50^{\circ}\text{C}\sim+70^{\circ}\text{C}$
- ◆ Accuracy:  $\pm 1^{\circ}\text{C}$
- ◆ Resolution: higher than  $-20^{\circ}\text{C}$ ,  $0.1^{\circ}\text{C}$ ; no more than  $-20^{\circ}\text{C}$ ,  $1^{\circ}\text{C}$ .
- ◆ Power: 1.5 V One LR44

### Operating Instructions

#### Switch between in and outside temperature measuring

- ◆ When electrified for 2 seconds to measure inside temperature and the LCD will display IN.
- ◆ Press key [FSW] to switch into outside temperature measuring and the LCD will display OUT.

#### Clock Function Setting

- ◆ Press key [FSW] to switch LCD into clock display.
- ◆ Press key [HR] to adjust H and if pressed more than 2 seconds, it will be adjusted quickly.
- ◆ Press key [MIN] to adjust MI and if pressed more than 2 seconds, it will be adjusted quickly.

#### Power On/Off

- ◆ Press [FSW] 4 seconds to turn off the machine, but the clock continues working.
- ◆ Press key [FSW] to turn on the machine.